Transmitter Solutions Firefly3™ Type: FIRIII310MCD21K3 FCC ID: SU7310MCD21K3

This device complies with Part 1.5 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept interference received, including interference that may cause undesired operation.

NOTICE

Any changes or modifications to Transmitter Solutions equipment not expressly approved by Transmitter Solutions could void the manufacturer's warranty and could void the user's authority to operate the equipment.

WARRANTY

The warranty period of Transmitter Solutions Firefly3™ transmitters is twenty-four (24) months. This warranty shall begin on the date the transmitter is manufactured. During the warranty period, the product will be repaired or replaced (at the sole discretion of Transmitter Solutions) if the product does not operate correctly due to a defective component. This warranty does not extend to (a) the transmitter case, which can be damaged by conditions outside the control of Transmitter Solutions, or (b) battery life of the transmitter. This warranty is further limited by the following disclaimer of warranty and liability:

EXCEPT AS SET FORTH ABOVE, TRANSWITTER SOLUTIONS MAKES NO WARRANIES RECARDING THE GOODS, EXPRESS OR IMPLIED, INCLUDING WARRANITY OF MERCHANTABILITY OR WARRANITY OF MERCHANTABILITY OR WARRANITY OF HINLESS FOR A PARTICULAR PURPOSE. BUYER MAKES NO RELIANCE ON ANY REPRESENTATION OF TRANSWITTER SOLUTIONS, EXPRESS OR IMPLIED, WITH RECARD TO THE GOODS AND ACCEPTS THEM "AS-IS/WHEERS": TRANSWITTER SOLUTIONS WILL HAVE NO LIABILITY OF ANY KIND AS A RESULT OF THE SALE. BUYER AGREES THAT TRANSWITTER SOLUTIONS WILL HAVE NO LIABILITY FOR DAMAGES OF ANY KIND, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING INJURIES TO PERSONS OR PROPERTY, TO BUYER, ITS EMPLOYEES OR AGENTS, AS A RESULT OF THE SALE. BUYER ALSO AGREES TO HOLD TRANSWITTER SOLUTIONS HARMLESS FROM ANY CLAMS BUYER, OR ANY THING PARTY, MAY HAVE AS A RESULT OF BUYER'S USE OR DISPOSAL OF THE GOODS. BUYER HAS READ THIS DISCLAIMER AND AGREES WAS THEN TERMS IN THE MAY HAVE AS A RESULT OF BUYER'S USE OR DISPOSAL OF THE GOODS. BUYER HAS READ THIS DISCLAIMER AND AGREES WAS THEN TERMS IN CONSIDERATION, OF EFFCHING THE GOODS.



3788 West 2270 South, Suite E Salt Lake City, UT 84120 (866) 975-0101 • (866) 975-0404 FX www.transmittersolutions.com Manual - 310 1 Button



Thank you for choosing a Transmitter Solutions product. Please read this manual carefully before using the product.

Made in Taiwan. Copywrite © 2015 Transmitter Solutions.

CONTENTS

1 - TRANSMITTER OVERVIEW

1A - General information

1B - Technical specifications

1C - Main components

2 - NUMBERING

3 - PROGRAMMING

4 - OPERATION

5 - BATTERY ACCESS

6 - TROUBLESHOOTING

1A - General information

The Transmitter Solutions- Firefly3TM Transmitter is a very small (1-1/2" \times 2-1/8" \times 3/8") key chain style wireless transmitter operating at 310 MHz. The FireflyTM achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with all dip switch receivers operating at a 310 frequency, including all *Linear*® dip switch dicital receivers.

Linear is a registered trademark owned by Linear Corporation

2 - CODING

Set the ten-digit toggle code switch to match the code set in the receiver. Access to the Firefly"s toggle code switch is achieved by removal of the back cover and battery (if necessary). Move switches using a small pointed object, such as a paper dip, gently switching the small switches to either the ON or OFF position. (In Detail below, switches 2, 4, 7 and 9 are in the ON position.) When complete, reinstall battery and replace back cover inserting bottom dip into front groove, then replace and tighten screw.

3- OPERATION

Once the codes are set to match the receiver codes, you may test the system. Ensure the gate or door is visible and clear before testing.

Step 1. Push the Firefly^{TW}s button from a distance of about ten feet. If the receiver activates, the switches are properly matched.

Step 2. Test the transmitter from several locations to discover any "blind spots" caused by interference.

4 - BATTERY ACCESS

Remove set screw and open case from back. Attend to proper polarity when installing or replacing battery.

See "coding" for proper removal and replacement of back cover.

5 - TROUBLESHOOTING



Inside Back of

Back

Detail of Switches

Front

PROBLEM	SOLUTION
The system does not receive	Ensure clear plastic battery
the transmitter signal.	Insulator has been removed; OR
The transmitter LED will not light.	Replace the transmitter battery.
The system does not receive	Check to ensure the
the transmitter signal.	transmitter switches are coded to
The transmitter LED is ON.	match your system receiver.
The operating range is reduced.	Replace the transmitter battery.

The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.

1B - Technical Specifications

Operating frequency: 310 MHz

Number of buttons: 1

Battery: 1 ea. 12V A23

 
Number combinations: 1024

Operating temperature : -20°F - 100°F

Overall dimensions : 1-1/2 x 2-1/8 x 3/8 inch

Weight: 1 oz.

1C - Main components



Black Case with Green Button