

# Vinyl & EPDM Seal Kit Installation Instructions

## TOOLS NEEDED:



#2 Phillips  
Driver Bit



Drill



Tape  
Measure



Hack Saw



Scissors



Pencil



Ladder

**Step 1:** Lay your kit components out and identify which piece is needed to install on the header of your door. If you have an 8X10 door, the header section would be 4 feet long for a retail kit, and 8 feet for a professional kit (Figure 2).

**Step 2:** Remove any existing weather seal around the jamb of your garage door

**Step 3:** Measure the top or header (Figure 1 & 3) of your garage door. Mark the measurement of the header with your pencil on the retainer (Figure 4).

**Step 4:** If needed, cut the retainer and Vinyl or EPDM to match the measurements you took using the hack saw and scissors (Figures 5 and 6).

**Step 5:** Mock-up the positioning of the kit for the sides and header of your door. With a pencil to mark the mounting position by using the pre-drilled holes in each retainer. If needed, use the hack saw to cut down the retainer to fit. It is recommended that the brush seal makes contact with the door.

**Step 6:** Using a ladder, drill, #2 phillips driver bit, and the included phillips pan Head tek-screws, secure the vertical portions of the kit to the header. (Figure 7)

**Step 7:** Repeat step 4 starting from the bottom of the door. Install the remaining kit segments to the sides of the door until the installation is complete.

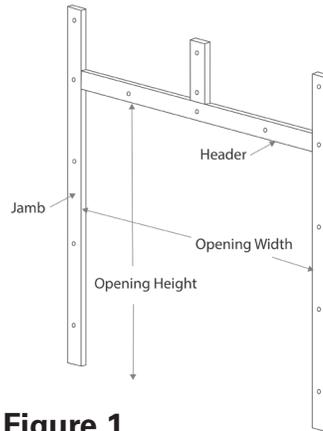


Figure 1

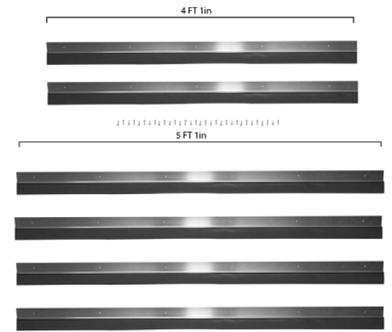


Figure 2

\*Appearance of kit varies with choice of seal color (white, black & gray) and seal size (1, 1 3/8 & 2 inches).  
■ For 10' 0" drop ceiling ■ with black seal pictured above.



Figure 3

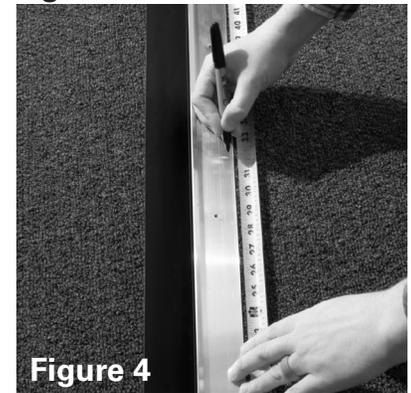


Figure 4



Figure 5



Figure 6



Figure 7



Figure 8