
DuraSeal Installation Instructions TOOLS NEEDED:

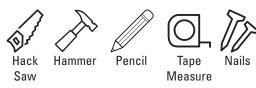

Note: When cutting, please use a hacksaw for smooth cuts and safety gear to prevent accidents.

Step 1: Roll the Duraseal out on a flat surface and weigh it down for 24 hours to straighten the product out.

Step 2: Measure the width of your header using a tape measure (Figure 1). You may need two people for this step.

Step 3: Using a pencil or pen, mark a piece of DuraSeal for your first cut. (Figure 2).

Step 4: Carefully cut the DuraSeal to length using the Hack Saw (Figure 3)

Step 5: DuraSeal comes with pre-tapped holes for installation. Starting at the end of the piece, tap a nail halfway into the seal every 8 inches where marked. (Figure 4)

Step 6: Place the seal against the door jamb with the vinyl fin facing inside the garage (Figure 5). Using the hammer, secure the nails partially into the door jamb allowing for adjustments in later steps.

Step 7: Using the tape measure, measure the vertical side of your door jamb (figure 1). Using a pen or pencil, make a mark where you need to cut (figure 2).

Step 8: Carefully cut the DuraSeal to length using the Hack Saw (Figure 3)

Step 9: To ensure a proper fit, cut a 45° angle off of the DuraSeal where it meets the top of the jamb (Figure 6). The vinyl fin will now be flush with your garage door.

Step 10: Tap the fasteners halfway into the seal every 8 inches using the pre-tapped holes (Figure 4). Begin at the end of the piece.

Step 11: Place the seal against the door jamb with the vinyl fin facing inside the garage (Figures 5 & 6). Using the hammer, secure the nails partially into the door jamb allowing for adjustments in later steps.

Repeat Steps 7 - 11 for the right side jamb with DuraSeal.

Step 12: Close the garage door, then finish securing the DuraSeal to the jamb by hammering in the nails. Make adjustments where needed.

Please Note: Placing the seal too close to the door may damage the seal when opening and closing the door.

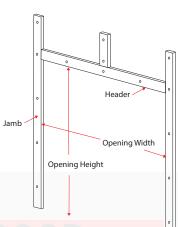




Figure 1

